



2. Attach the cancelling cam to the steering wheel with screws previously removed from wheel hub cover.

3. Position directional signal switch and housing on steering column and feed wires down through column and out through wire slot opening where clamp was removed.

Attach directional signal lever and lockwasher to switch at opening in housing.

Install steering wheel in correct straight ahead position and tighten securely.