




# CHEVROLET

## 1953 PASSENGER USING AC TYPE SC-453 OIL FILTER



FRONT "U" BOLT TO BE BEHIND  
HORN BOSS ON MANIFOLD

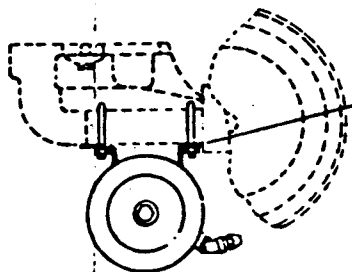


POSITION FILTER AS CLOSE  
TO HEAT RISER BOX AS  
POSSIBLE

### WARNING

AFTER INSTALLATION, OPERATE ACCELERATOR AND  
HAND BRAKE TO ASSURE ADEQUATE CLEARANCE TO  
FLEXIBLE TUBE. ADJUST THESE FITTINGS TO AVOID  
TUBE CONTACT WITH ANY MOVING PARTS.

FOR EASIER INSTALLATION, ASSEMBLE ELBOW III INTO  
TEE 103 IN APPROXIMATE POSITION AS SHOWN—THEN  
INSTALL ON ENGINE.

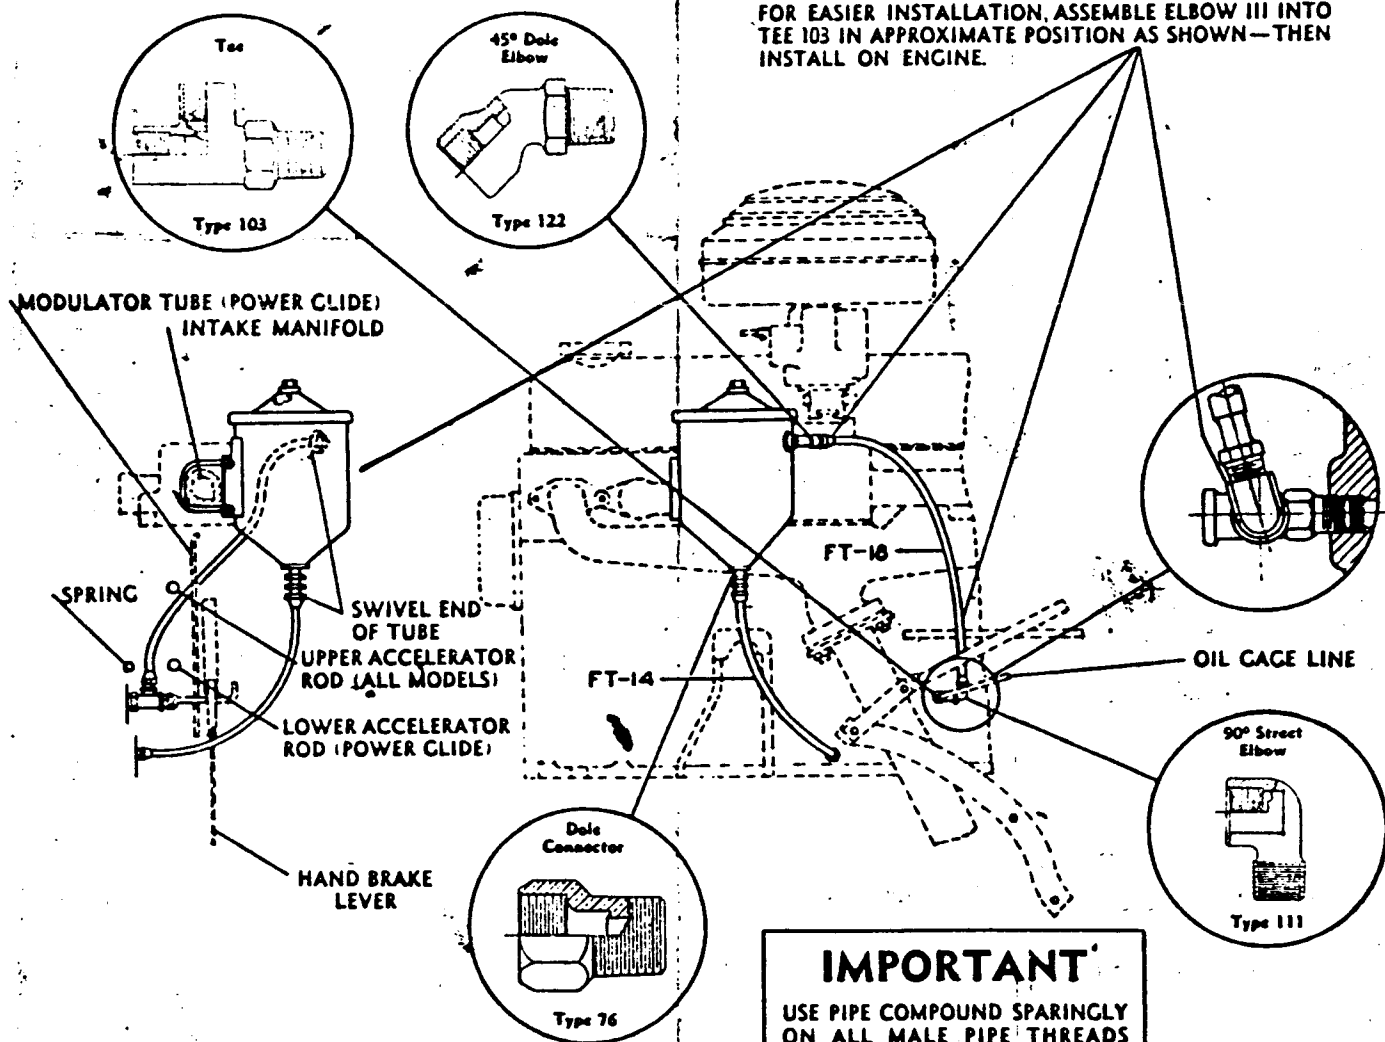

**IMPORTANT**  
USE PIPE COMPOUND SPARINGLY  
ON ALL MALE PIPE THREADS  
ADD OIL TO BRING CRANKCASE  
LEVEL TO NORMAL