


# INSTALLATION INSTRUCTIONS FOR DIRECTIONAL SIGNALS ON CARRYALL SUBURBAN, PANEL AND CANOPY EXPRESS TRUCKS

Models 3105, -06, -07, and -16, 3805 and 3807.

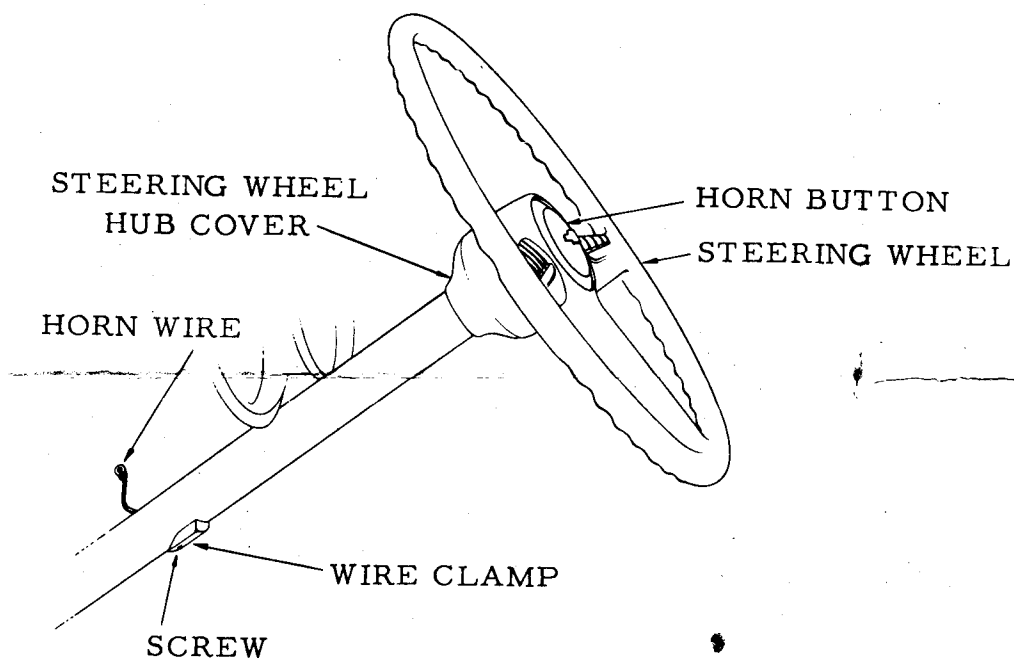

1. Remove the horn button. Remove steering wheel with puller. Remove and save the screws attaching the steering wheel hub cover to steering wheel and discard cover.

Remove wire clamp and screw from steering column underneath the instrument panel and save parts.